

The spare parts list is referring to the following versions:

ZF 63 IV	versions 14 (1.29 R);	15 (1.56 R);	16 (2.00 R);	17 (2.48 R);
	versions 001 (1.29 R);	002 (1.56 R);	003 (2.00 R);	004 (2.48 R);
	versions 012 (1.29 R);	013 (1.56 R);	014 (2.00 R);	015 (2.48 R);
ZF 80 IV	versions 04 (1.21 R);	05 (1.40 R);	01 (1.64 R);	02 (2.01 R);
	versions 001 (1.21 R);	002 (1.40 R);	003 (1.64 R);	004 (2.01 R);
ZF 80-1 IV	versions 007 (1.21 R);	008 (1.40 R);	006 (1.64 R);	009 (2.01 R);
			010 (2.49 R);	

Name plate

The name plate is mounted to the transmission

