


2. CLUTCH HOUSING


CAUTION

Do not contaminate the clutch outer with oil and grease.

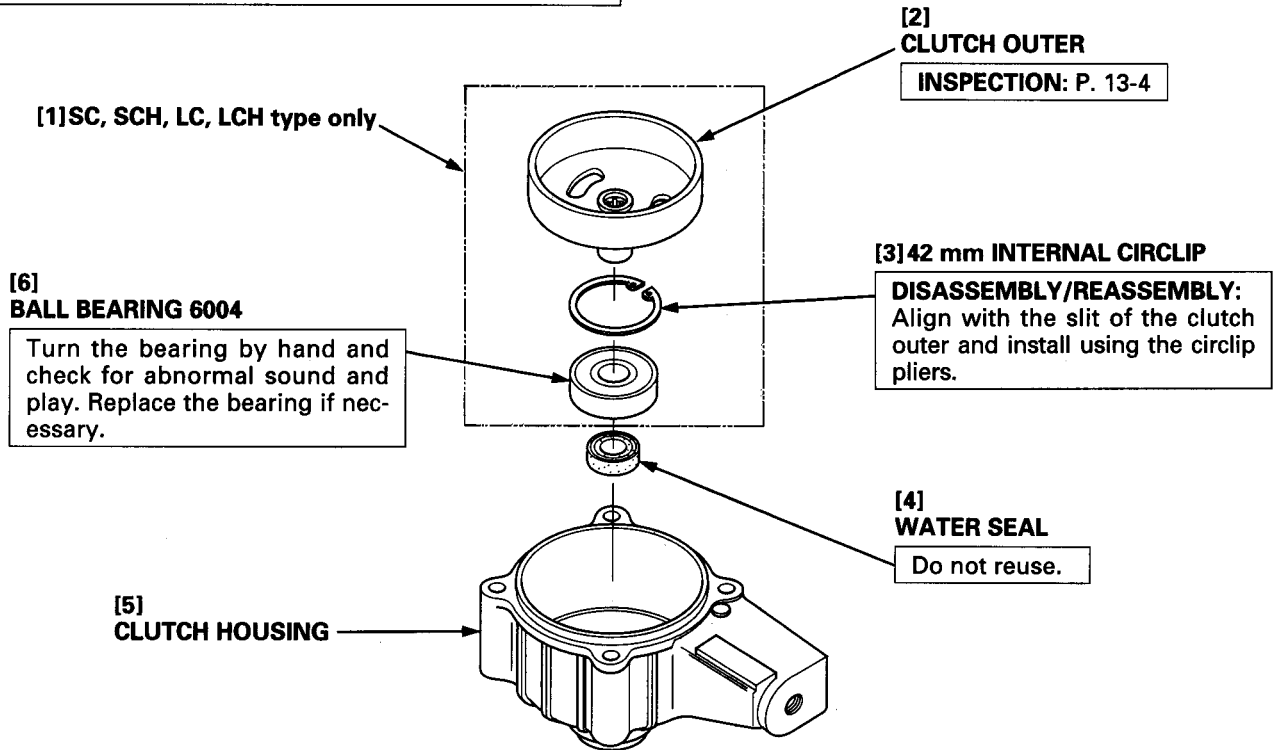

• WATER SEAL REPLACEMENT

1) Remove the water seal using the special tool.

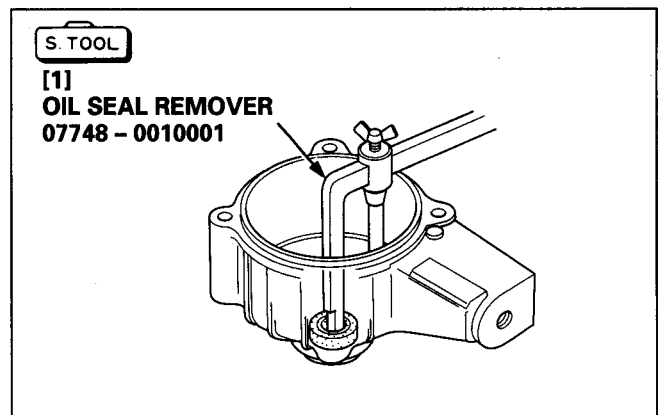

2) Install a new oil seal using the special tools.

3) Apply marine grease to the water seal lip.

