

Every 150 hours or 3 months (whichever occurs first).

Drain and renew lubricating oil (see page 63).

Renew lubricating oil filter element.

Clean air intake gauze.

* Check drive belt tension.

Clean water trap.

Check engine for leakage of oil and water.

Lubricate dynamo rear bush (where fitted).