


Chapter 4. Disassembly/Assembly

SeaTalk Deck Plug

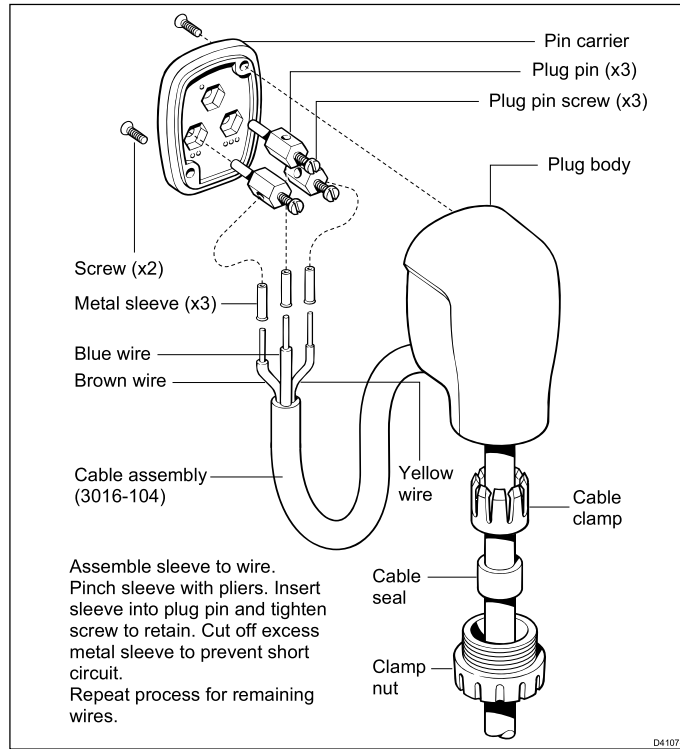

Electrical connections

Wire colour	Description
Brown	+12V nominal supply
Blue	0V supply

ST3000 Autopilot Display Unit

Spare parts list

The item numbers refer to Figure 2: ST3000 Autopilot display unit.

Item	Spare Description	Part No.	Comments
–	Control Head	Q056	Complete head
	LCD kit, including	Q053	
4	LCD surround		
5	LCD		
6	Elastomer		
7	Diffuser		
8	Reflector		
27	Locking wedge (x5)		
9	PCB assembly	Q044	LCD not included
13	Fluxgate assembly	M022	
30	SeaTalk deck plug assembly	D326	