



OPERATION

- 1 ON/OFF switch and volume control for external loudspeaker. The volume control will have no influence on microtelephone and alarm signals from the SELCALL.
- 2 Squelch and transmitter power control.
The receiver noise-in periods with no signal will be muted when the knob is turned clockwise.
25 W transmitter power when the knob is pushed in.
1 W transmitter power when the knob is pulled out.
- 3 Transmitter indicator. Indicates that the transmitter is operating.
- 4 DUAL WATCH indicator. Indicates that the DUAL WATCH function is on and it is not possible to transmit.
- 5 Channel indicator.
- 6 CALL indicator. Indicates that a selective tone call is received either from your own testbutton or from a coast station.
- 7 CQ indicator. Indicates that a CQ/ALARM call is received either from your own testbutton or from a coast station.
- 8 Dimmer control and DUAL WATCH switch. By means of the dimmer control the light intensity in channel display and indicators can be regulated.
DUAL WATCH is on when the knob is pulled out.
DUAL WATCH is off when the knob is pushed in.
- 9 TEST ON/OFF switch for SELCALL.
Pressing the switch in position TEST for app. 1 second the SELCALL facility can be tested. The CALL and CQ indicators will be illuminated and a tone signal will be heard in the loudspeaker. By pressing the switch in position ON/OFF the light in the CALL and CQ indicators will be switched off.
- 10 Channel selector. Selects second channel digit.
- 11 Channel selector. Selects first channel digit.
- 12 CH 16 knob. When it is pushed the radiotelephone operates on the calling and distress channel. The channel display will indicate 16. The channel selectors and DUAL WATCH are out of function. By pushing the CH 16 knob again the radiotelephone switch back to the original mode.
- 13 Handset connector.