


Fig. 07 BOITIER D'HELICE TRANSMISSION

Réf. N°	Référence	Description		Remarques
1	6A1-45300-00-EJ	UNITE INFERIEURE (ENS.)	1	
2	6A1-45310-00-EJ	BOITIER D'HELICE (ENS.)	1	
3	646-45316-09	. DOUILLE, ARBRE MOTEUR	2	
4	90387-11319	. COLLERETTE	1	
5	6A1-45181-00-EJ	PLAQUETTE	1	
<hr/>				
6	90340-08014	PLOT, FILETE DROIT	2	
7	90430-08020	JOINT	2	
8	97395-06030	VIS	1	
9	92990-06600	RONDELLE, PLATE	1	
10	6A1-45510-00	ARBRE MOTEUR (ENS.)	1	
<hr/>				
11	93604-09066	CLAVETTE	1	
12	93103-11051	JOINT SPY	1	
13	646-45534-00-03	CALE (T:0.30MM)	1	
	646-45534-00-05	CALE (T:0.50MM)	1	UR
14	90214-11010	RONDELLE, A GRIFFES	1	
<hr/>				
15	646-45551-00	PIGNON D'ATTAQUE (13D)	1	
16	93430-06005	CLIPS	1	
17	93306-00001	ROULEMENT	1	
18	646-45567-00-03	CALE (T:0.30MM)	1	
	646-45567-00-05	CALE (T:0.50MM)	1	UR
<hr/>				
19	646-45560-00	PIGNON 1 (27T)	1	
20	90250-03002	GOUPILLE, DROITE	1	
21	93103-10052	JOINT SPY	1	
22	646-45360-00-EJ	COUVERCLE BOITIER D'HELICE	1	
23	646-45363-00	JOINT	1	
<hr/>				
24	97390-06014	BOLT (624)	2	
25	92990-06600	RONDELLE, PLATE	2	

Fig. 07 BOITIER D HELICE TRANSMISSION

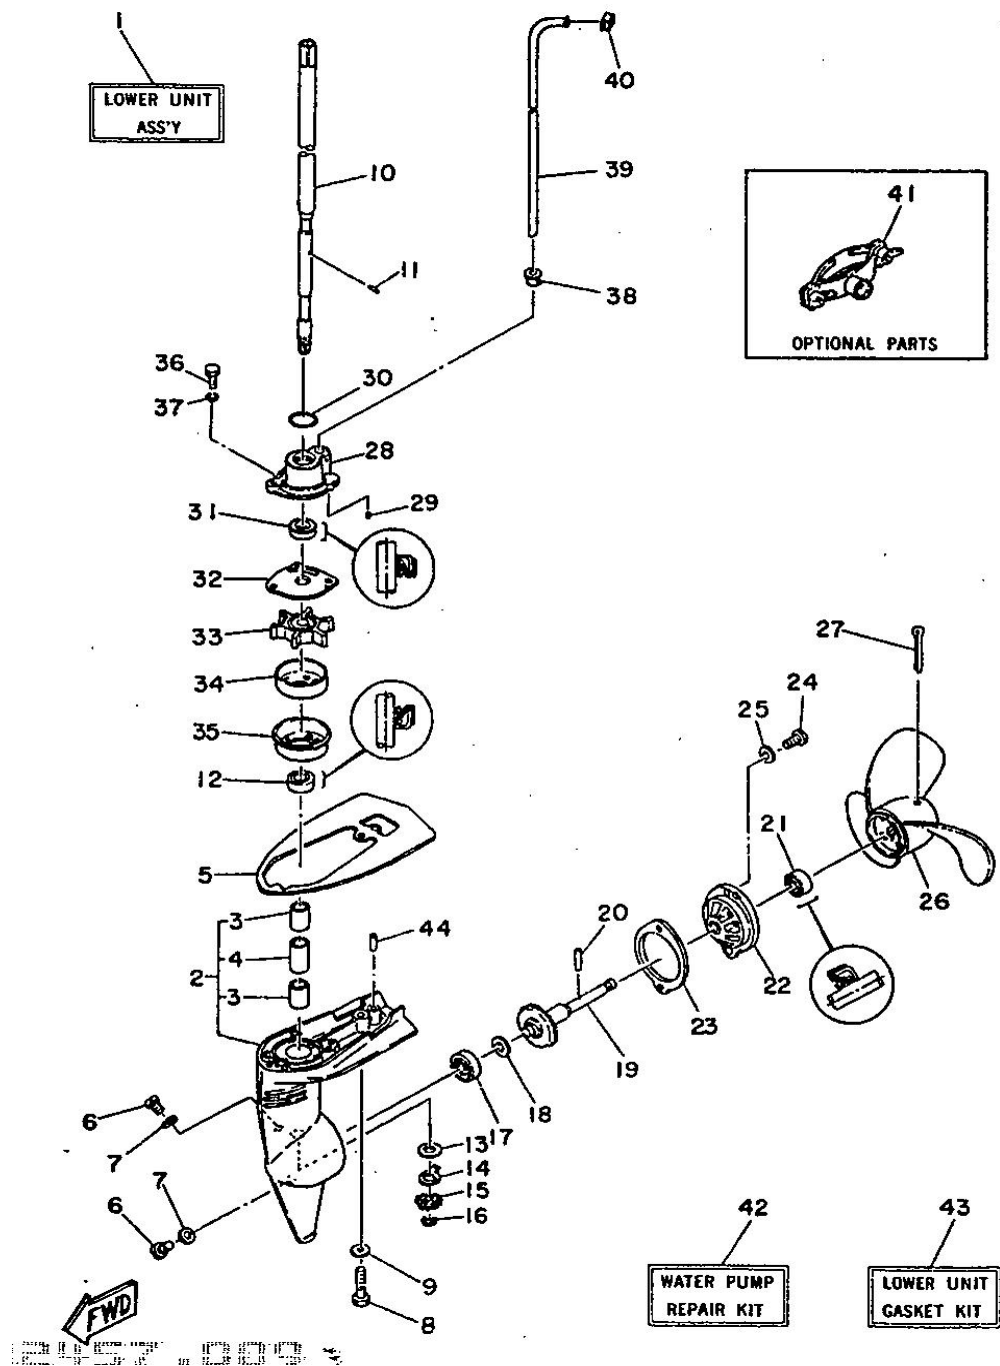

Ref. N°	Référence	Description		Remarques
26	6A1-45943-00-36	HELICE (3X7-4/1"X4"-A)	1	
	646-45942-00-36	HELICE (3X7-1/4"X5-1/2"-A)	1	UR
	646-45944-00-36	HELICE (3X7-1/4"X4-1/2"-A)	1	UR
27	91490-30040	GOUPILLE	1	
28	6A1-44312-00	COUVERCLE	1	
<hr/>				
29	93604-09068	CLAVETTE	2	
30	93210-19123	JOINT TORIQUE	1	
31	93103-11051	JOINT SPY	1	
32	646-44323-00	PLAQUE EXTERIEURE	1	
33	646-44352-01	TURBINE	1	
<hr/>				
34	646-44322-00	CUVETTE	1	
35	6A1-44325-00	PROTECTEUR, JOINT D'HUILE	1	
36	97390-05016	BOLT (624)	2	
37	92990-05100	RONDELLE, GROWER	2	
38	646-44366-01	JOINT, TUBE D'EAU 2	1	
<hr/>				
39	646-44361-00	TUBE D'EAU 1	1	
40	646-44365-00	JOINT, TUBE D'EAU 1	1	
41	646-28193-00	BOUCHON, CONTROLE D'EAU	1	
42	6A1-W0078-01	KIT DE REPARATION DE LA POMPE	1	
43	6A1-W0001-21	POCHETTE DE JOINTS EMBASE	1	
<hr/>				
44	93605-18M04	AXE	2	